

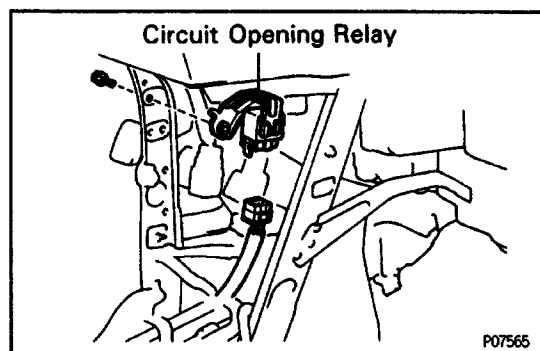


# CIRCUIT OPENING RELAY

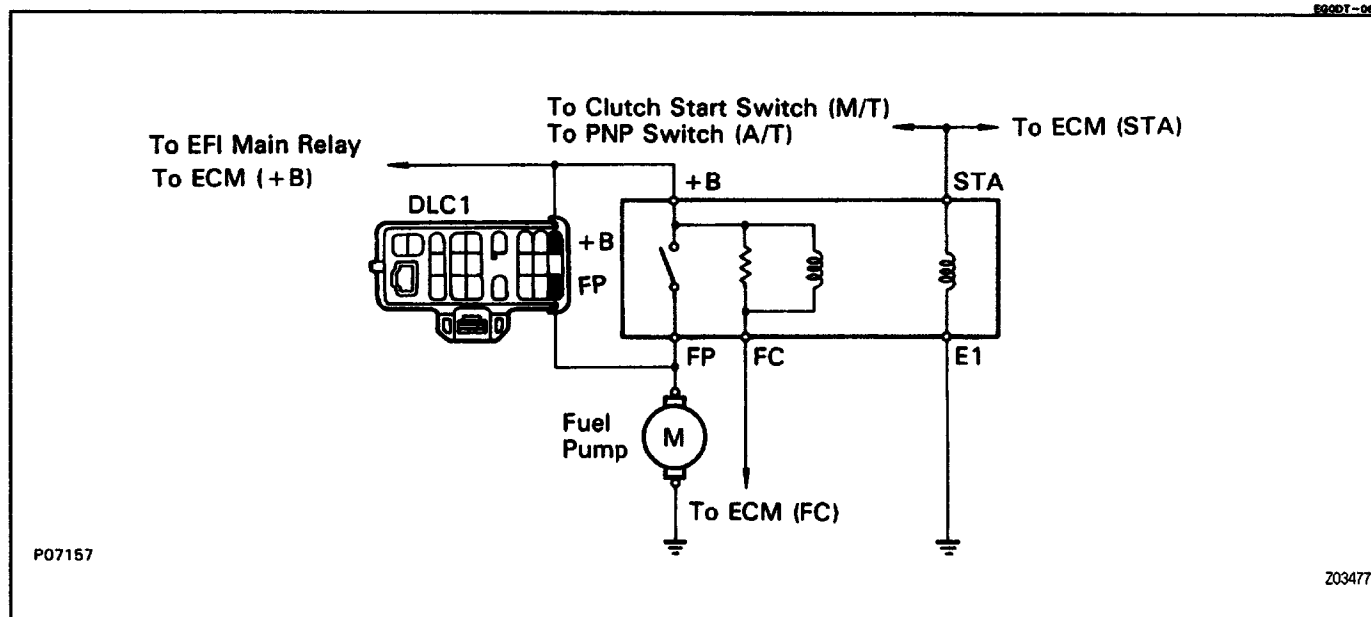

## CIRCUIT OPENING RELAY INSPECTION

1. REMOVE CENTER CLUSTER FINISH LOWER PANEL
2. REMOVE FINISH LOWER CENTER PANEL
3. REMOVE CIRCUIT OPENING RELAY

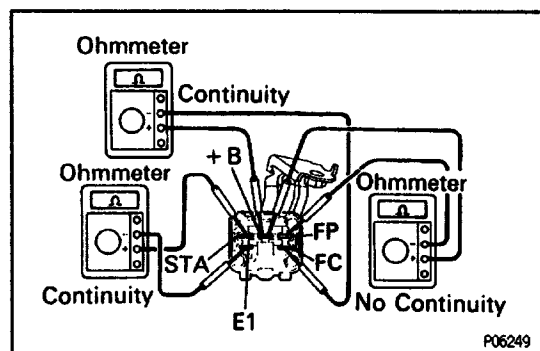


### 4. INSPECT CIRCUIT OPENING RELAY

#### A. Inspect relay continuity

- (a) Using an ohmmeter, check that there is continuity between terminals STA and E1.
- (b) Check that there is continuity between terminals +B and FP.
- (c) Check that there is no continuity between terminals +B and STA.

If continuity is not as specified, replace the relay.

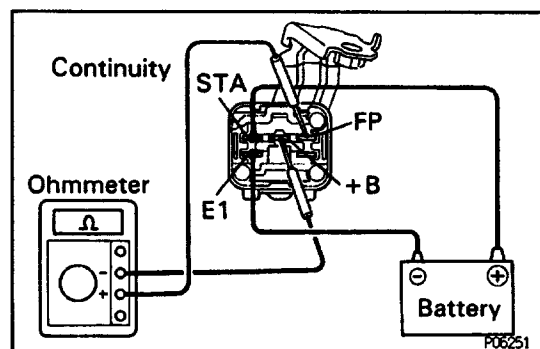

#### B. Inspect relay operation

- (a) Apply battery voltage across terminals STA and E1.
- (b) Using an ohmmeter, check that there is continuity between terminals +B and FP.

If operation is not as specified, replace the relay.

### 6. REINSTALL CIRCUIT OPENING RELAY

### 6. REINSTALL FINISH LOWER CENTER PANEL

### 7. INSTALL CENTER CLUSTER FINISH LOWER PANEL