



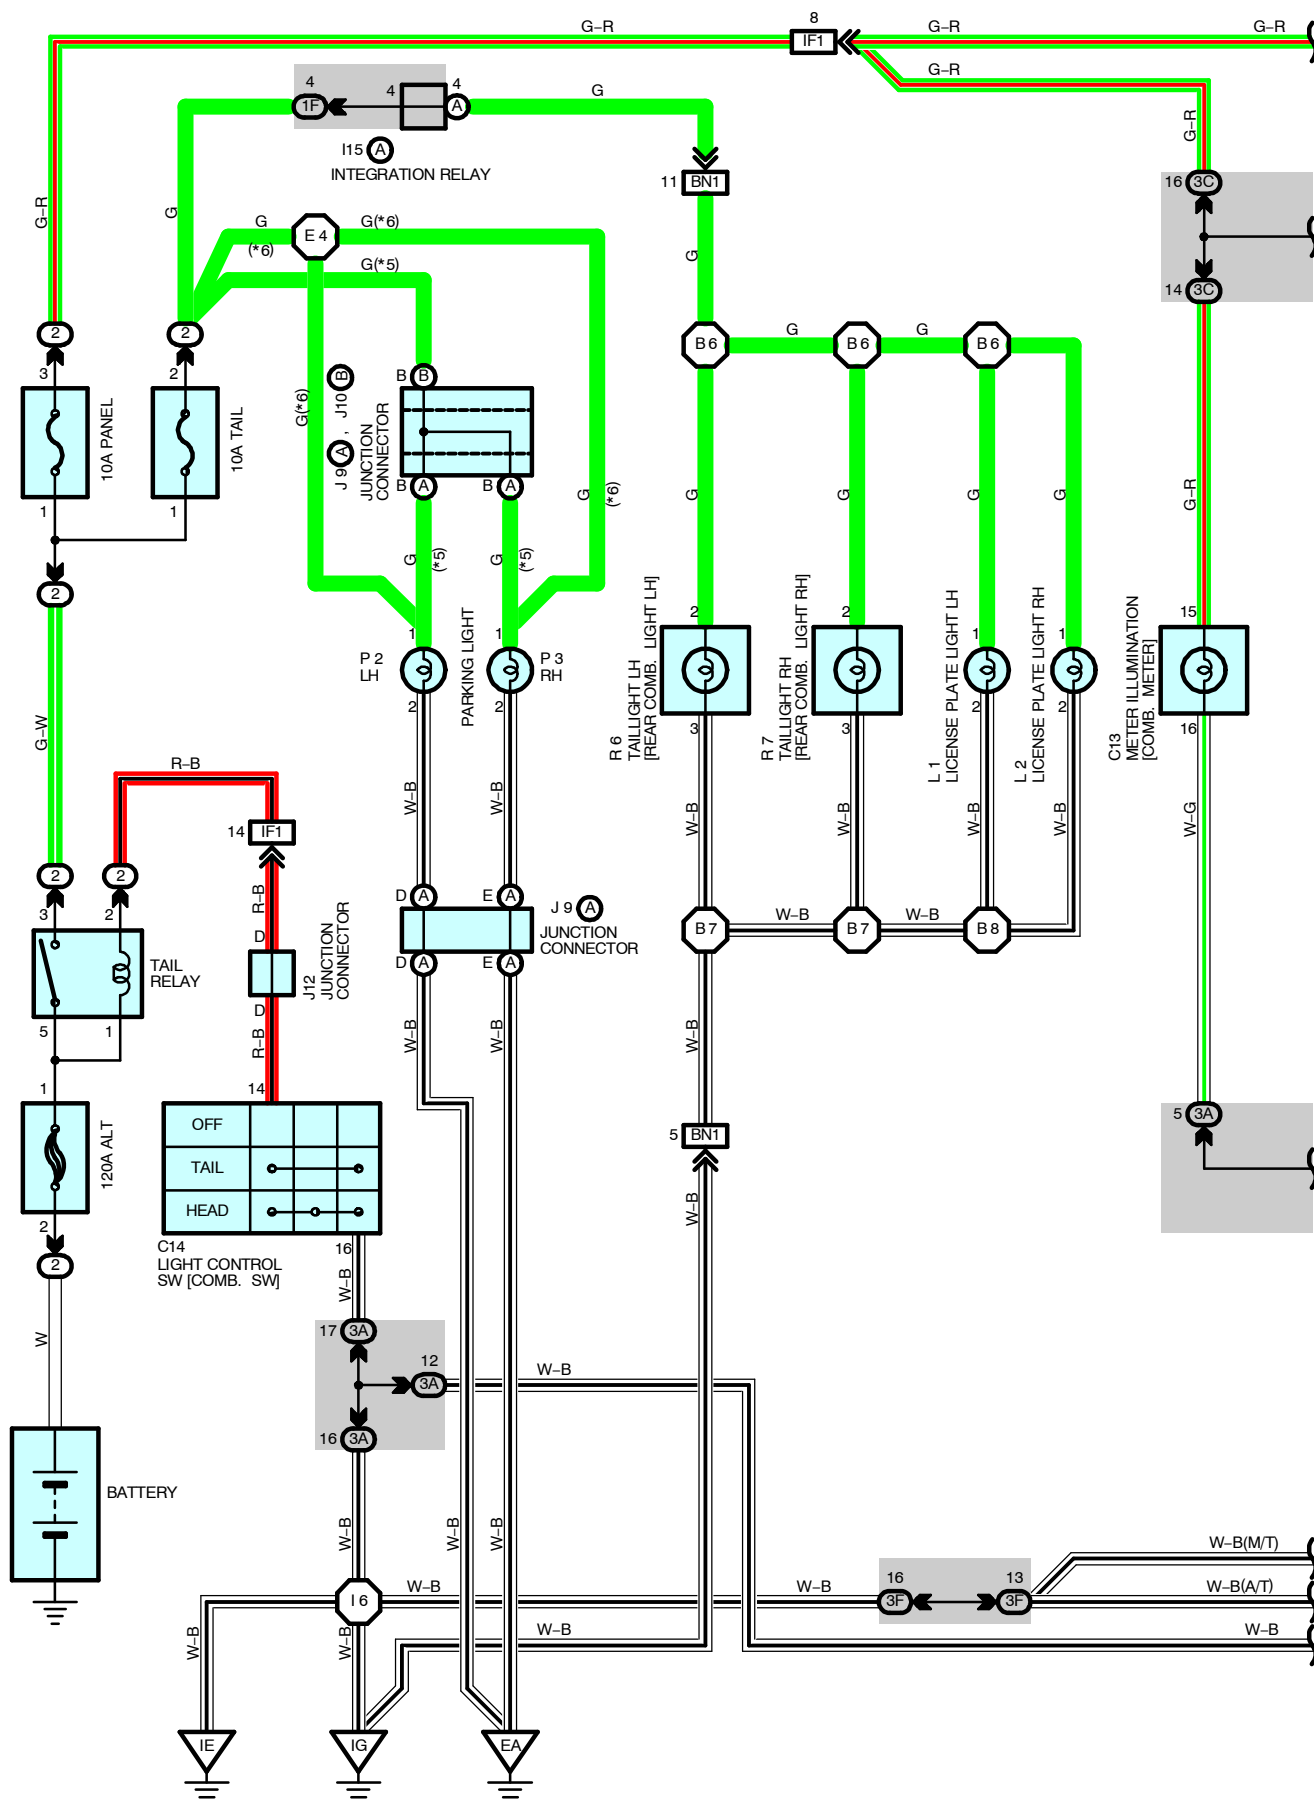

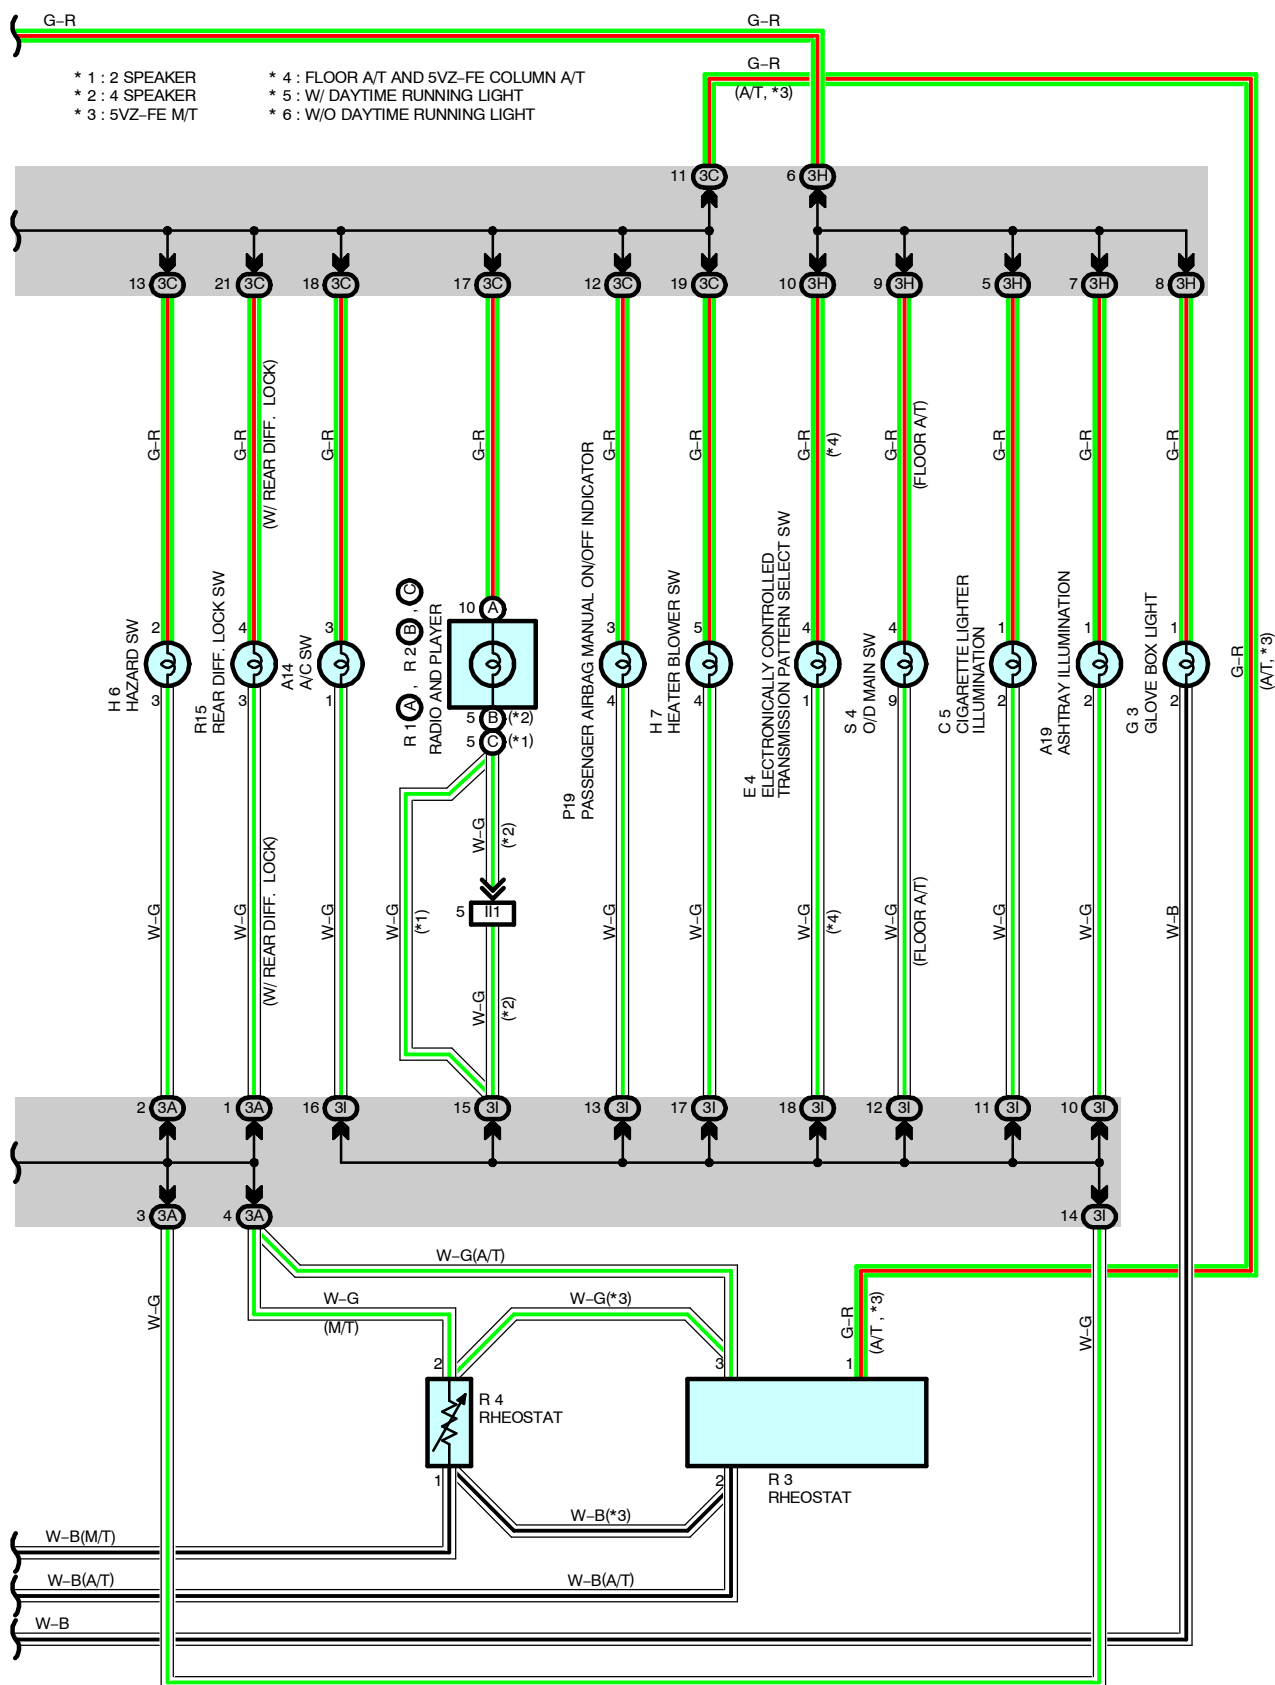

TAILLIGHT AND ILLUMINATION

SERVICE HINTS

C14 LIGHT CONTROL SW [COMB. SW]

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

TAIL RELAY [R/B NO.2]

3-5 : Closed with light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
A14		32		J9	A	29 (5VZ-FE)		R1	A	33	
A19		32		J10	B	29 (5VZ-FE)		R2	B	33	
C5		32				31 (3RZ-FE,2RZ-FE)			C	33	
C13		32		J12		33		R3		33	
C14		32		L1		34		R4		33	
E4		33		L2		34		R6		34	
G3		33		P2		29 (5VZ-FE)		R7		34	
H6		33				31 (3RZ-FE,2RZ-FE)		R15		33	
H7		33		P3		29 (5VZ-FE)		S4		33	
I15	A	33				31 (3RZ-FE,2RZ-FE)					
J9	A	31 (3RZ-FE,2RZ-FE)		P19		33					

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	22	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
3A	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3C		
3F		
3H	26	Cowl Wire and J/B No.3 (Behind the Instrument Panel Center)
3I		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	40	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
II1	40	Cowl Wire and Floor No.3 Wire (Instrument Panel Brace)
BN1	42	Frame Wire and Cowl Wire (Under the Driver's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	36 (5VZ-FE) 38 (3RZ-FE, 2RZ-FE)	Front Left Fender
IE	40	Around the Right Edge of the Reinforcement
IG	40	Around the Left Edge of the Reinforcement

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	36 (5VZ-FE) 38 (3RZ-FE, 2RZ-FE)	Engine Room Main Wire	B6 B7	42	Frame Wire
I6	40	Cowl Wire	B8		

