

STATUS LIGHT	EQUIP. PROBLEM	CHECK
ON	NORMAL OPERATION	-
1 BLINK	IGNITION FAILURE	GAS FLOW GAS PRESSURE GAS VALVE FLAME SENSOR
2 BLINKS	CLOSED PRESSURE SWITCH	PRESSURE SWITCH STUCK CLOSED
3 BLINKS	PRESSURE SWITCH FAILURE TO CLOSE	VENTER PRESSURE SWITCH VENT BLOCKAGE
4 BLINKS	OPEN LIMIT SWITCH	MAIN LIMIT OPEN AUX. LIMIT OPEN
5 BLINKS	FALSE FLAME SENSED	STICKING GAS VALVE
RAPID CONTINUOUS	INCORRECT TWINNING INCORRECT PRIMARY POLARITY	REVERSE TRANSFORMER SECONDARY LEADS REVERSE PRIMARY WIRES