


# Blower Motor Resistor: Testing and Inspection

## Resistor Inspection

1. Remove the glove compartment.
2. Disconnect the resistor connector.

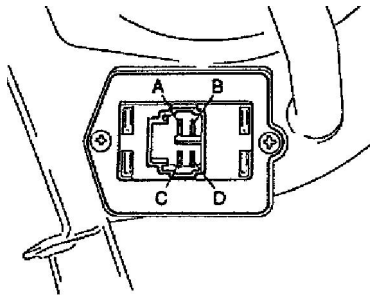

○—○ : Continuity

Terminal			
A	B	C	D
○	○		
○		○	
○			○

3. Check for continuity between the resistor terminals.
4. If not as specified, replace the resistor.