



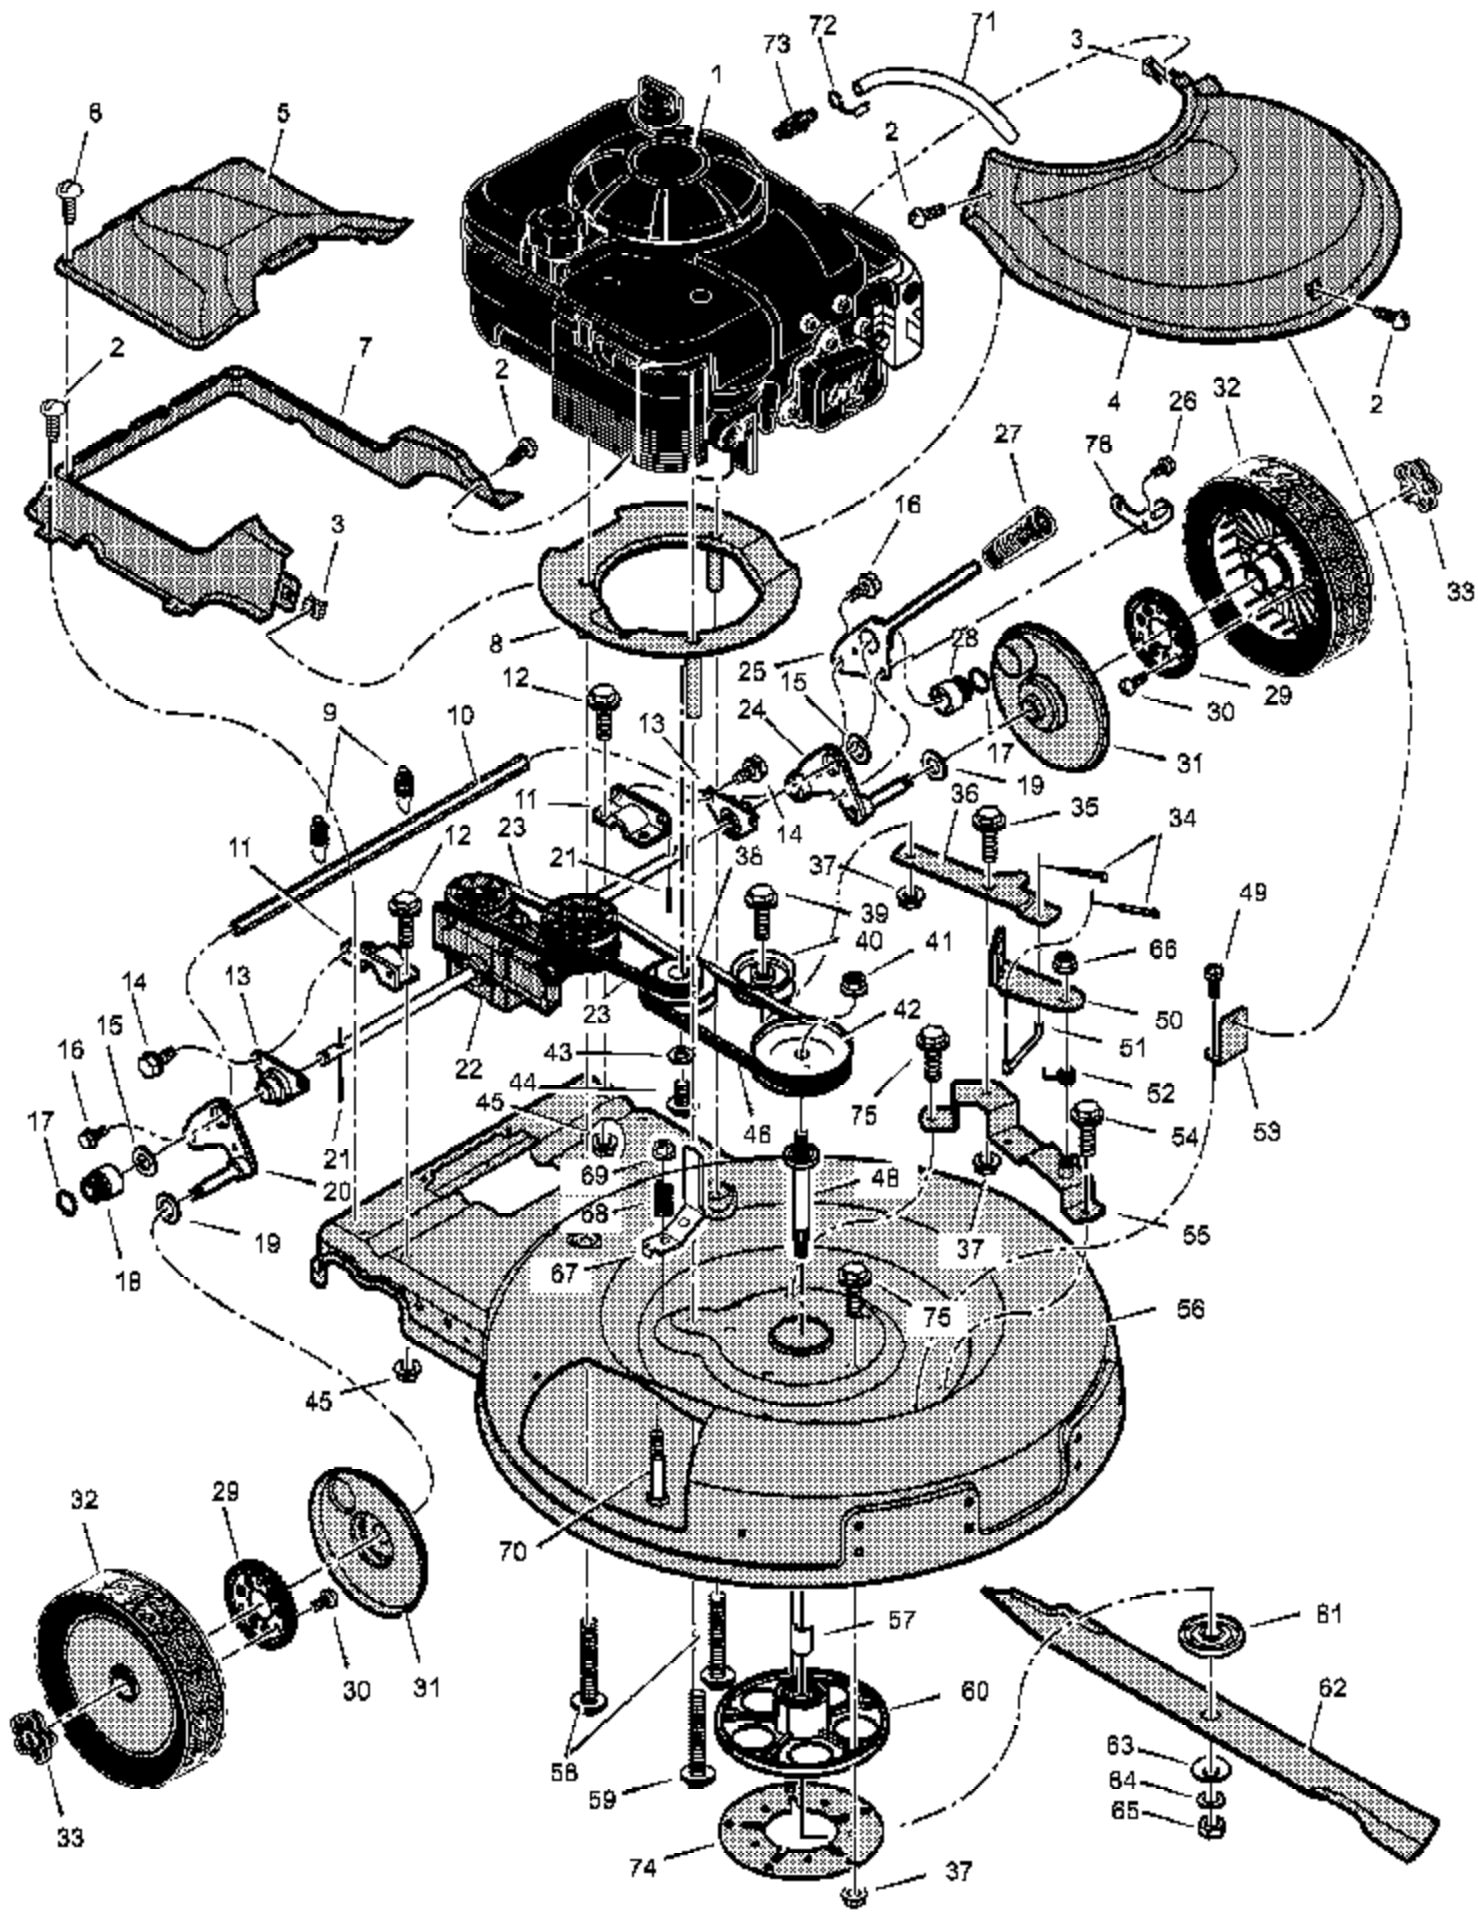


Ref #	Part Number	Qty	Description
1			Engine
2	26X305		Screw
3	028X75		Tinnerman, "U"
4	1101164		Cover, Front
5	1101166		Cover, Transmission
6	26X300		Screw
7	1101165		Cover, Rear
8	1101187E724		Base Assembly, Engine
9	165X151		Spring, Extension
10	1101207 Z		Crossbar, Rear
11	1101148		Bearing, Axle Support
12	001X85		Screw
13	1101189		Retainer Assembly, Axle Bearing
14	710277		Screw
15	17X186		Washer, Thrust
16	26X263		Screw
17	011X29		Retainer Ring
18	1101152		Gear, Right Pinion
19	0020X3		Washer, Spring
20	1101235		Bracket Assembly, Right Axle
21	043629		Pin, Drive
22	1101233		Transmission There are no internal serviceable parts for the transmission.
23	37X118		Belt, Transmission
24	1101234		Bracket Assembly, Left Axle
25	1101192		Lever, Spring Height Adjuster
26	26X263		Screw, Tap
27	671297		Knob, Height Adjuster
28	1101153		Gear, Left Pinion
29	1101211		Gear
30	26X296		Screw, Tap
31	1101163		Cover, Dust
32	1101147		Wheel, Drive
33	672449		Knob, Axle
34	0030X1		Pin, Cotter
35	710200		Bolt, Shoulder
36	1101174 Z		Idler Arm
37	015X84		Nut, Flange
38	1101156		Pulley, Engine
39	01X111		Screw
40	056526		Pulley, Idler
41	15X140		Nut, Blade Pulley
42	1101191		Pulley, Blade
43	018X31		Washer, Split
44	710163		Screw
45	45171		Nut
46	37X117		Belt, Blade Drive
48	1101193		Jackshaft
49	26X233		Screw
50	1101190		Brake Assembly, Blade
51	1101196		Link, Blade Brake
52	166X27		Spring, Torsion
53	1101205E020		Bracket, Front Cover
54	26X214		Screw
55	1101230 Z		Support Assembly, Idler & Brake
56	1101221E020		Housing
57	1101194		Spacer, Jackshaft


Ref #	Part Number	Qty	Description
58	025X17		Bolt, Short Engine Mount
59	025X18		Bolt, Long Engine Mount
60	1001049		Mandrel Assembly
61	092466		Adapter, Blade
62	1101590E701		Blade
63	17X166		Washer, Cup
64	17X165		Washer
65	15X100		Nut, Blade Mount
66	015X88		Nut
67	1101466 Z		Guide, Belt
68	0164X1		Spring
69	015X79		Nut
70	001X75		Bolt
71	1101438		Tube, Oil Drain
72	327422		Cap, Oil Drain
73	325547		Valve, Oil Drain
74	1101597E020		Support, Jackshaft Housing
75	025X10		Screw
76	1101465E020		Bracket Assembly, Lifter
	F-020467L		Instruction Book

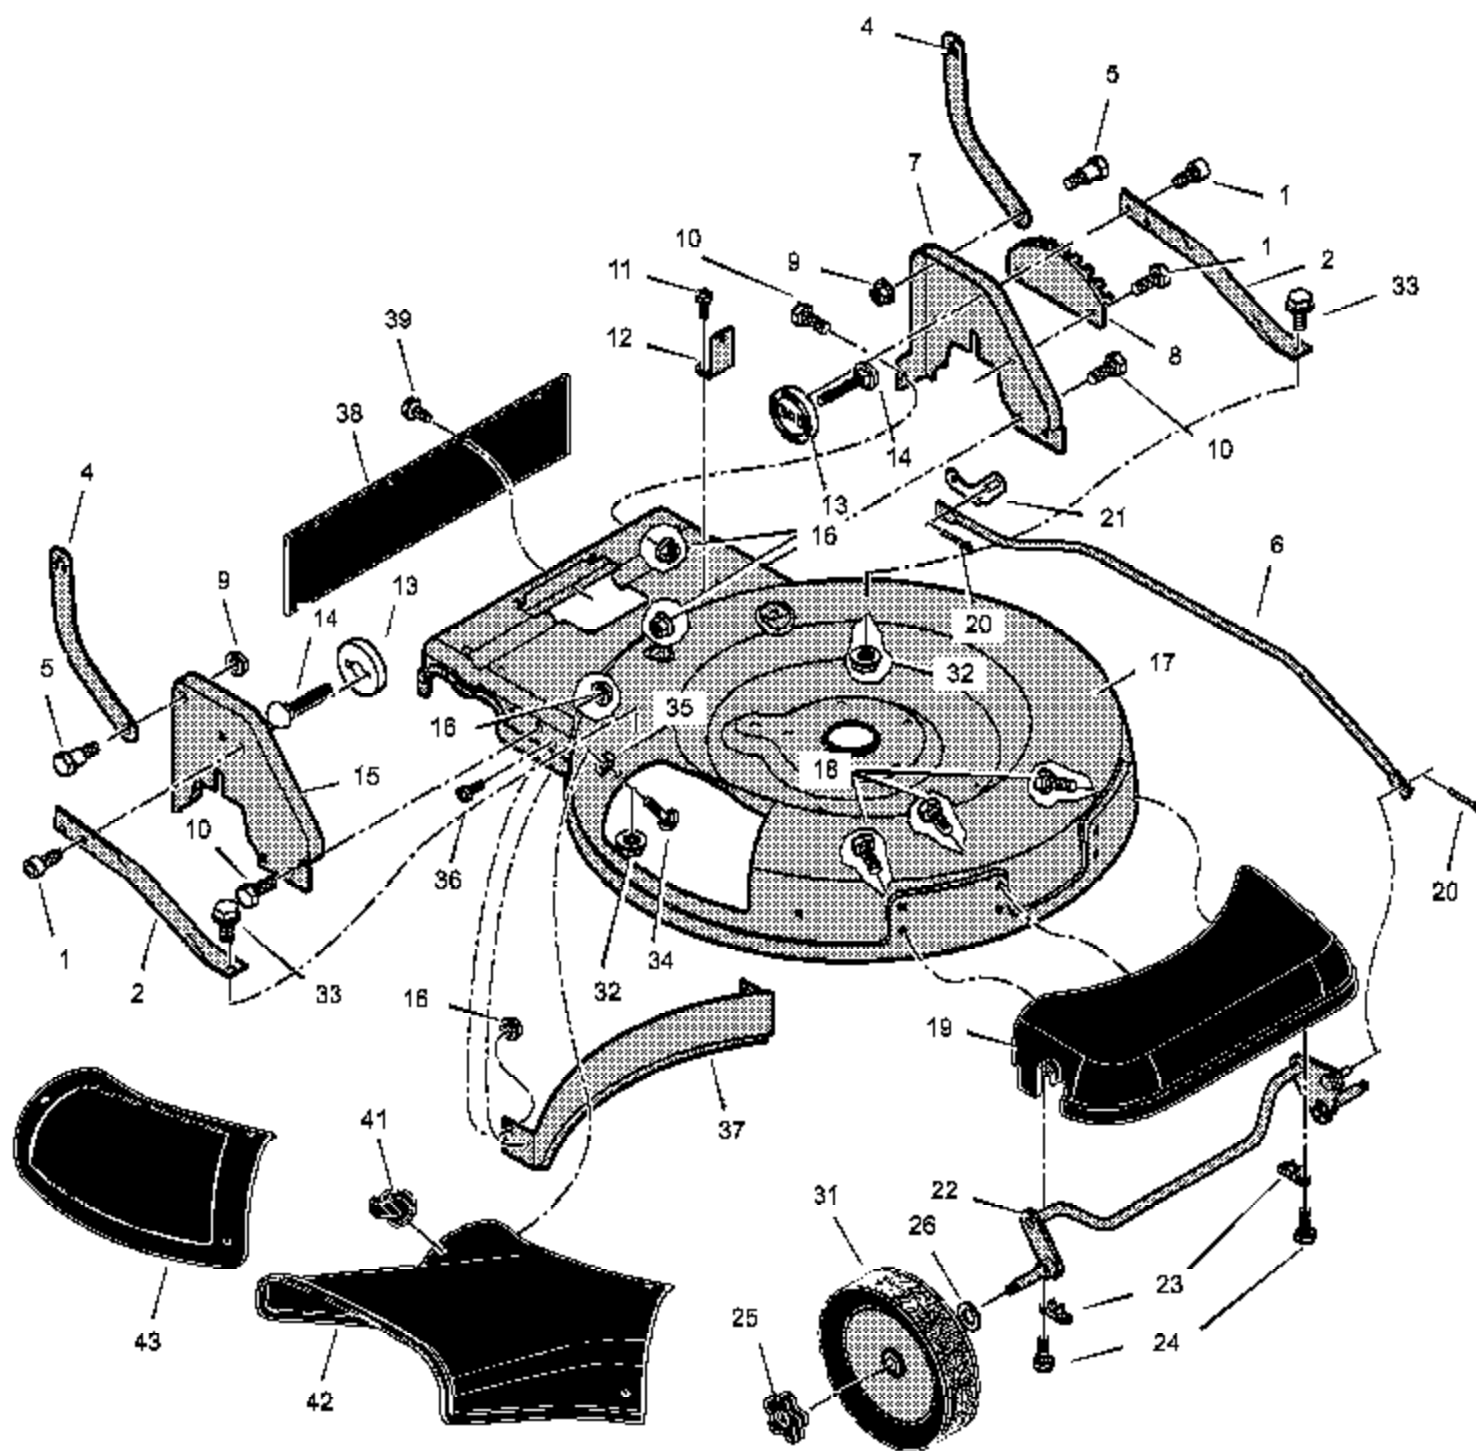

Ref #	Part Number	Qty	Description
1	710277		Screw
2	1101378E020		Brace, Handle Bracket
4	1101229E724		Support, Handle
5	710200		Bolt, Shoulder
6	1101468E020		Link, Lifter
7	1101168E020		Bracket, Left Handle
8	1101206E020		Plate, Index
9	015X84		Nut, Flange
10	001X85		Screw
11	26X233		Screw
12	1101213E020		Bracket, Blade Drive Cable
13	1101155		Support, Handle Adjuster
14	002X76		Bolt, Carriage
15	1101169E020		Bracket, Right Handle
16	45171		Nut
17	1101221E020		Housing, Mower
18	26X301		Screw
19	1101223		Panel, Front
20	030X20		Pin, Cotter
21	1101465E020		Bracket Assembly, Lifter
22	1101186E020		Crossbar Assembly, Front
23	1101158		Clip, Front
24	26X300		Screw
25	672449		Knob, Axle
26	0020X3		Washer, Spring
31	1101146		Wheel and Tire
32	015X79		Nut, Flange
33	001X45		Bolt, Hex
34	002X95		Bolt, Carriage
35	028X55		Retainer, Bolt
36	26X293		Screw
37	1101171E020		Baffle, Rear
38	1101200		Deflector, Rear
39	710271		Screw
41	1101222		Knob
42	1101161		Deflector, Chute
43	1101162		Cover, Mulch

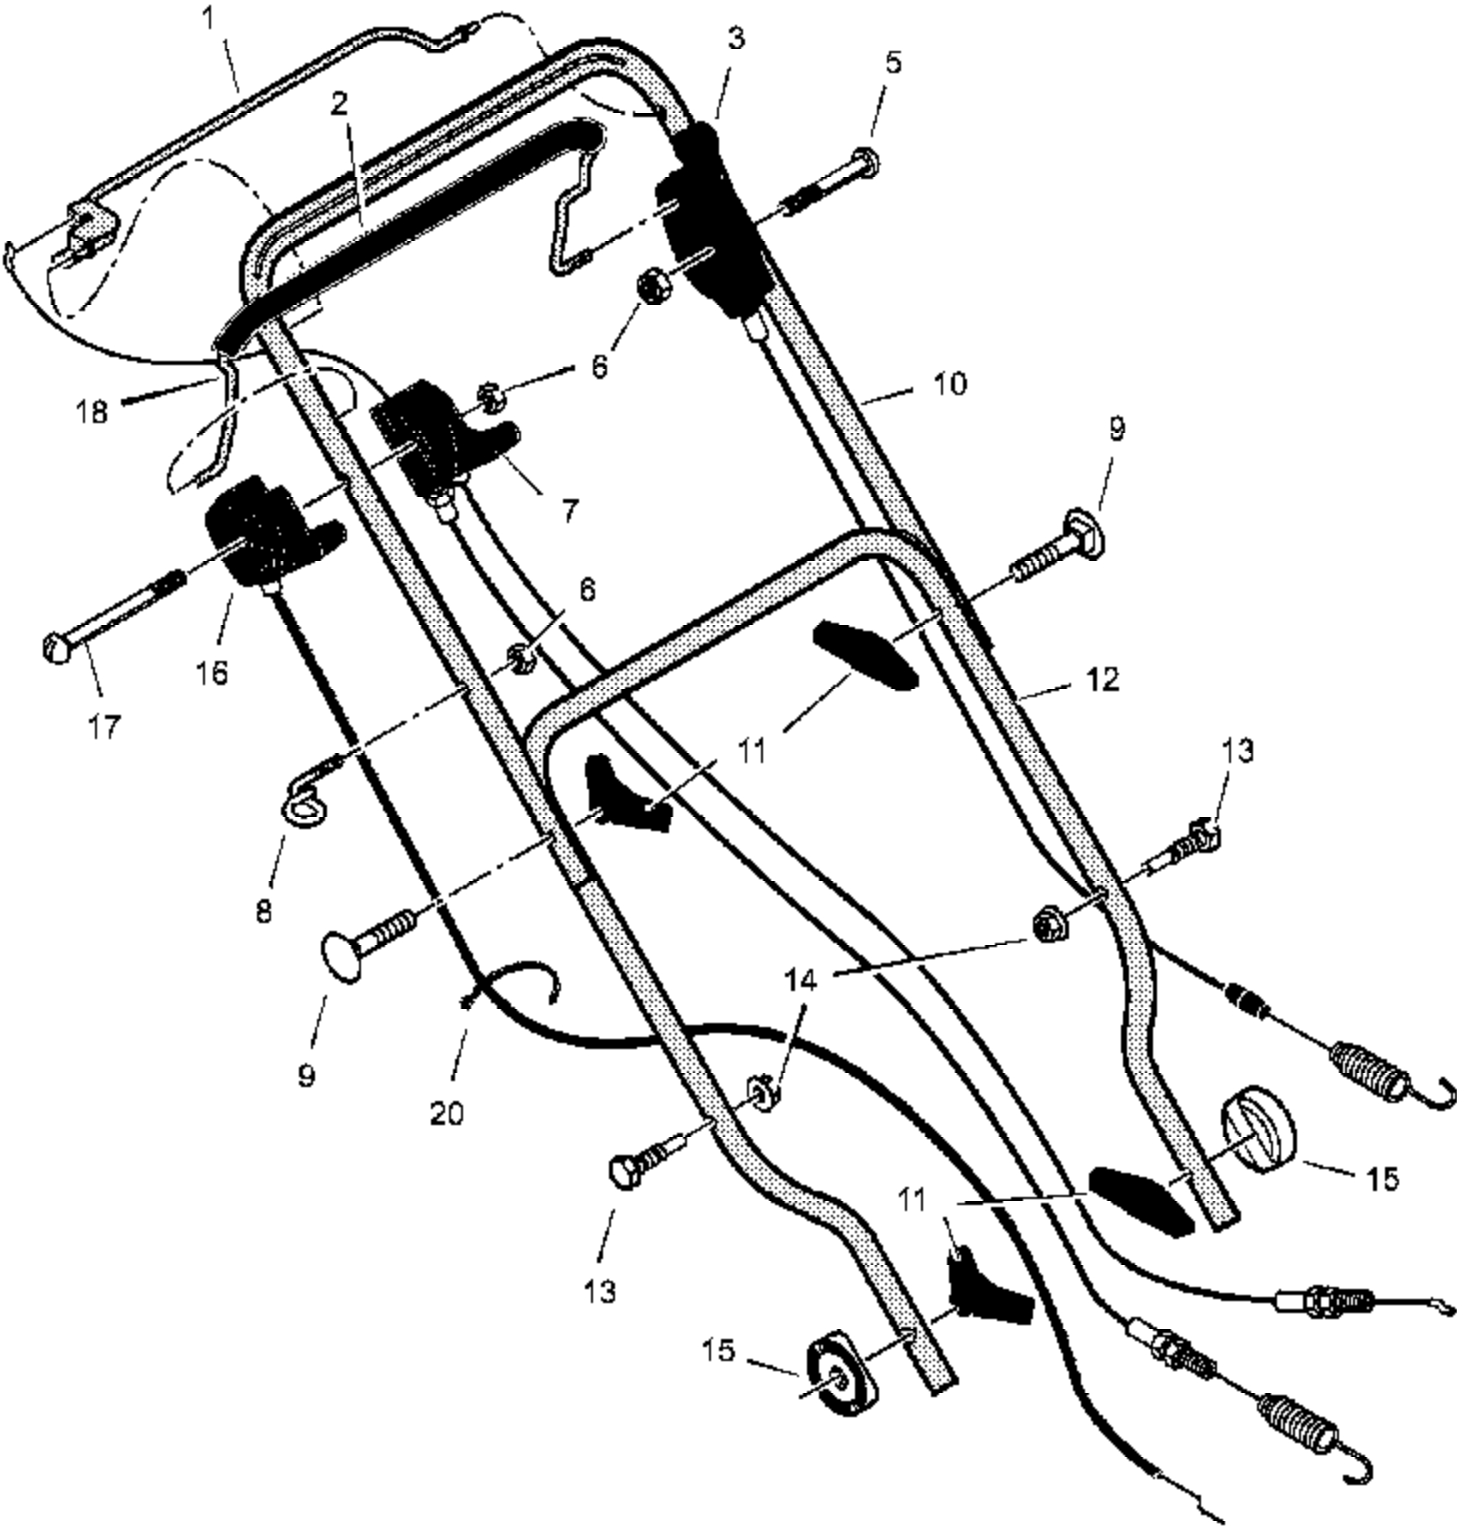

Ref #	Part Number	Qty	Description
1	1101188E020		Lever, Drive
2	1101160		Cover, Stop Lever
3	1101374		Control, Blade
5	03X144		Screw
6	15X116		Nut
7	1101430		Control, Speed & Drive Cable
8	672510		Guide, Rope
9	710175		Bolt, Carriage
10	1101218E724		Handle, Upper
11	1101453		Knob, Handle
12	1101217E724		Handle, Lower
13	01X183		Bolt, Handle Support
14	015X79		Nut, Flange
15	1101154		Adjuster, Handle
16	1101376		Cable and Throttle Control
17	03X152		Bolt, Hex
18	1101212E020		Lever, Blade Stop
20	071372		Tie, Cable

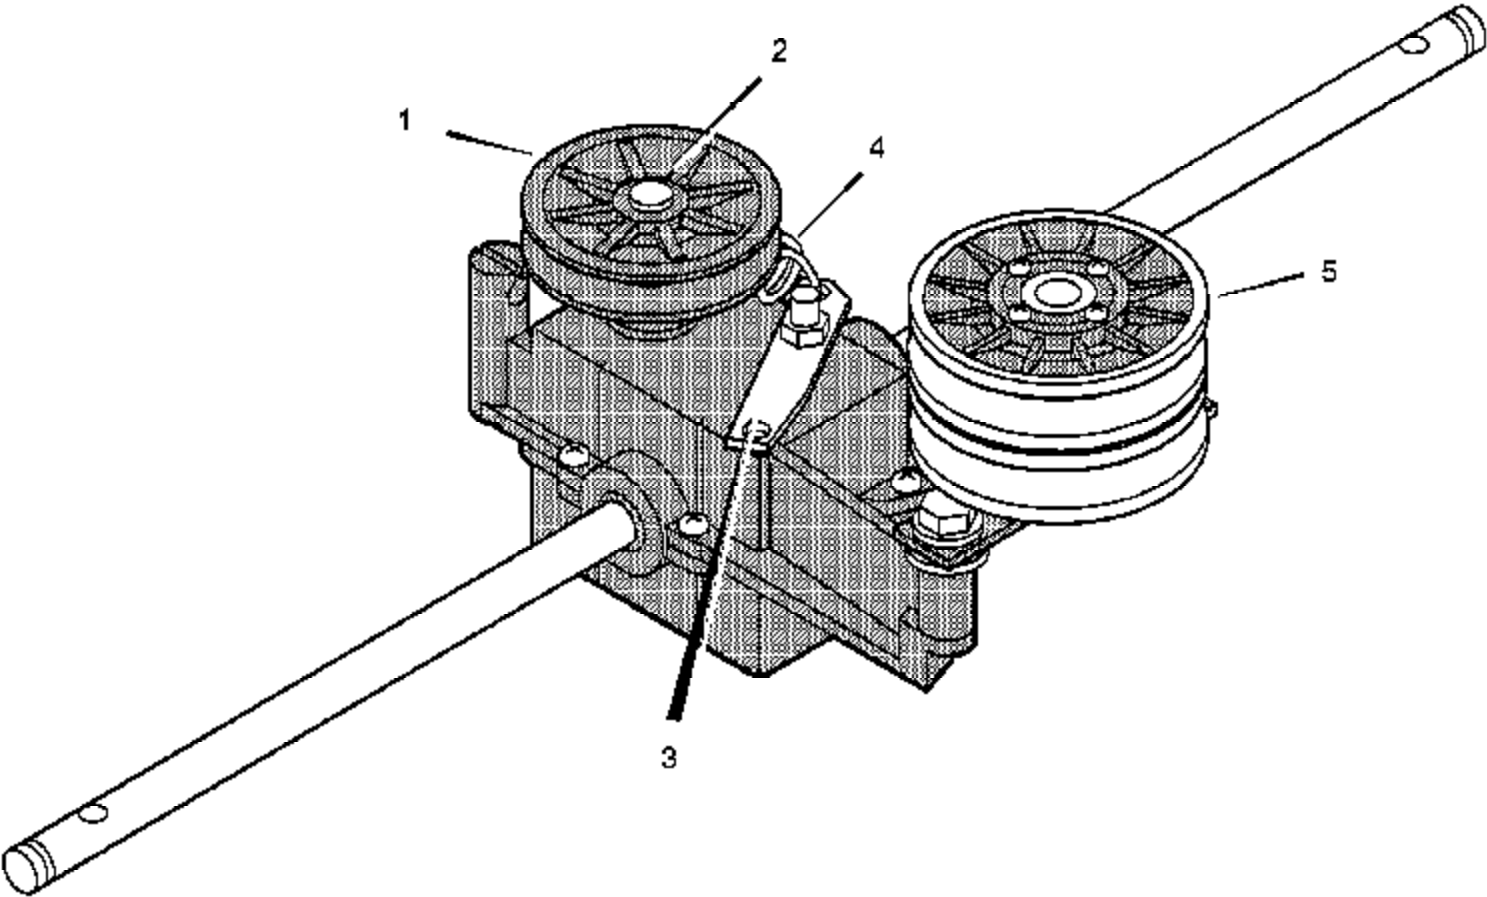

Ref #	Part Number	Qty	Description
1	7501007		Pulley
2	7501008		Attachment Pin, Pulley
3	7501009		Clutch Lever Assembly
4	7501010		Spring, Clutch Return
5	7501011		Variator Assembly
	1101233		Transmission Assembly There are no internal serviceable parts for the transmission.