



Europlus

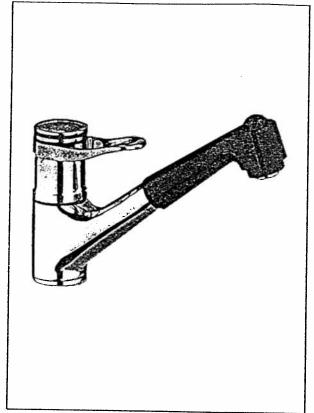


33 853 33.87/

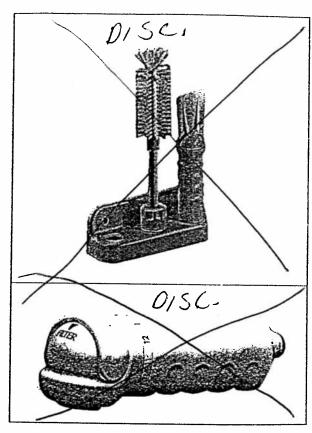



Kitchen accessories, see page 6

Gedruckt auf chlorfrei gebleichtem Papier. Printed on chlorine-free bleached paper. Imprimé sur papier blanchi sans chlore.



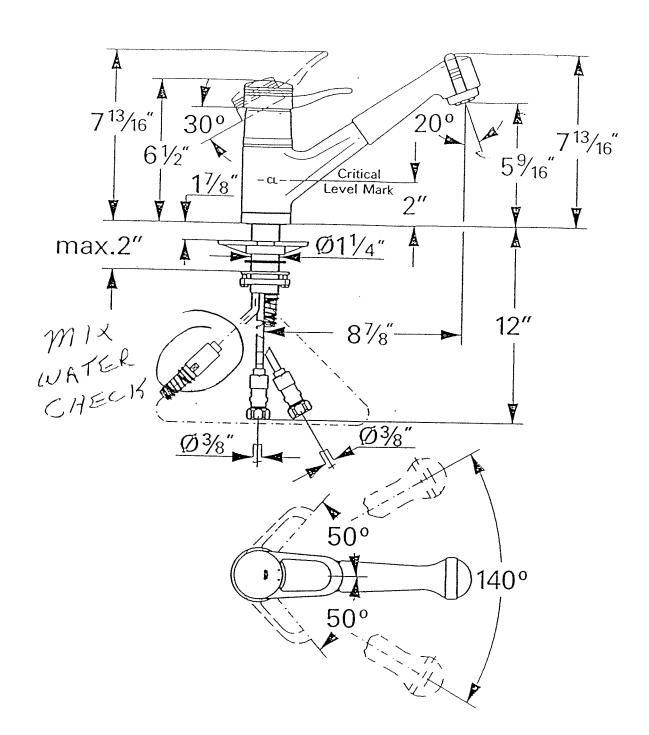

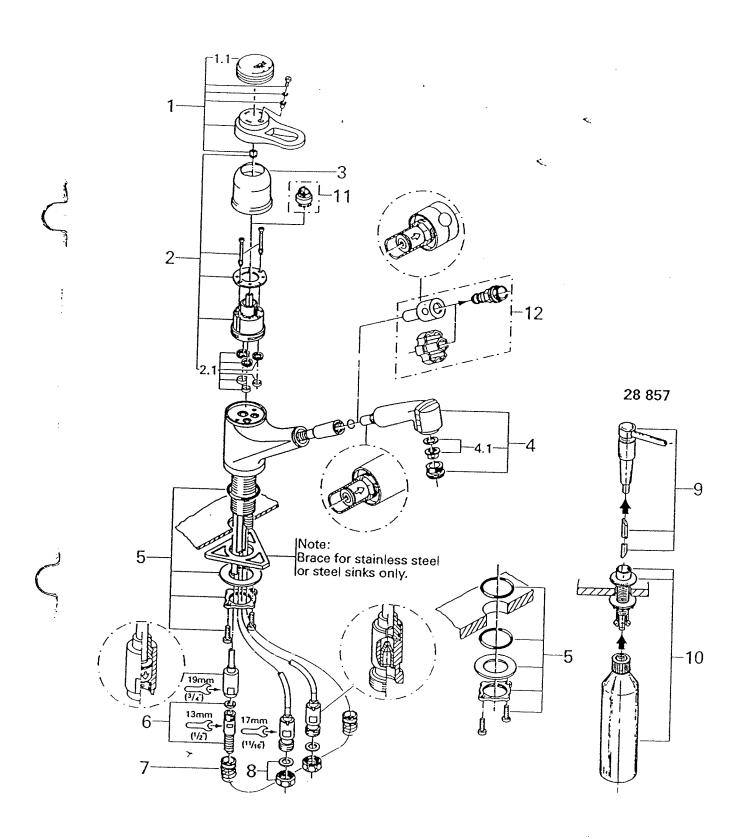

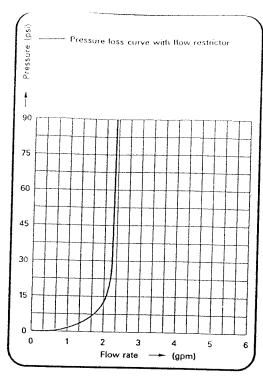

33 853

1

Specifications

488

Application

Operation is possible in conjunction with:

- Pressurized storage heaters
- Thermally controlled instantaneous heaters (set flow temperature to 120 °F)
- Hydraulically controlled instantaneous heaters (operation is however subject to certain restrictions in convenience occasioned by the function of the heater)

Operation with low-pressure storage heaters (displacement water heaters) is not possible.

Specifications

Max. flow

2.2 GPM

Flow pressure

- min.

[1]

7.25 psi

- recommended

14.5 - 72.5 psi

- greater than 72.5 psi, fit pressure reducing valve

Max. operating pressure

145 psi

Test pressure

232 psi

• Flow delivery see fig. [1].

• Temperature

- max. (hot water inlet)

176 °F

- scalding protection possible by fitting a temperature limiter, see optional accessory page 5, item 11
- Snap coupling and supply pipes with built-in non-return-valve

Water connection

hot - LH


cold - RH

Deck thickness max.

2"

Notes

- Major pressure differences between hot and cold water supply should be avoided.
- This fitting shall not be recessed more than one-half inch below the flood level of the fixture.

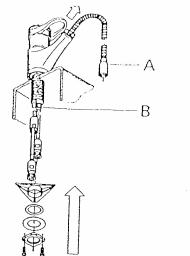




Installation

Prepare sink unit

fold out page I.

tion 9 and 10.

Flush pipes through thoroughly.

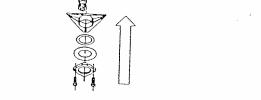


To make fixing of the faucet easier pull hose (A) out of the body until its end level with the end of the fixing shaft (B), see fig. [2].

Drill 11/4" hole for mixer, see dimensional drawing


Drill %" hole for soap dispenser variants, see replacement parts drawing fold out page II, posi-

- Tighten threaded flange against washers by hand (fingertight), see fig. [3].
- Tighten cheesehead screws with screwdriver, see fig. [4].

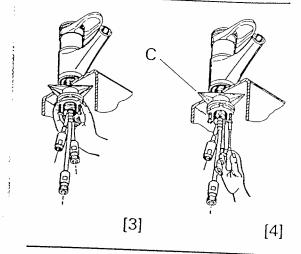

Note:

If brace (C) is omitted, clamp length can be increased by $\frac{1}{2}$ " to a total of 2".

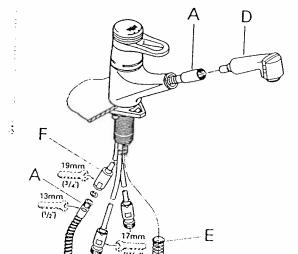

Connect mixer.

For this purpose the copper pipes must be fitted on to the angle stops (or other supply points). The hot water supply should be connected on the left, and the cold water supply on the right side.


Connect handspray (D), to spray hose (A) (Do not use additional seals), see fig. [5].


With handspray inserted, fit spring (E) from below onto spray hose (A).


Attach spray hose (A) to the copper pipe (F) in the centre, see fig. [5].


Check connections for leakage.


[5]

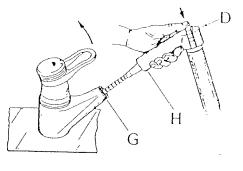


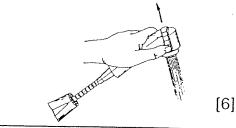

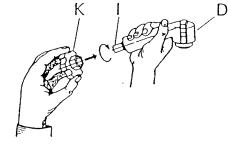

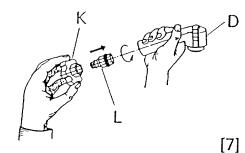

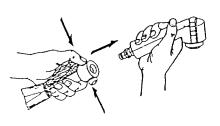

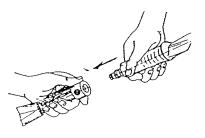

Open angle stops and check function of faucet.

Operation

1.Lever head

2. Handspray, see fig. [6].

Pull lever up (mixer open)

The water will always emerge first at the flow regulator.

Push changeover == control down.

Push changeover control up.

changeover to
 spray jet

Shutting of the mixer causes automatic changeover from spray to flow regulator.

To ensure that the handspray fits correctly when the handspray (D) is inserted, lug (G) on the outlet must engage in recess (H) of the handheld spray, see fig. [6].

With the addition of a click-set (Cat. No. 46 360) the handspray (D) may be exchanged for our kitchen set (Cat. No. 27 831) or our filter spray (Cat. No. 27 836), see figs. [7], [8] and page 6.

To fit click-set.

- 1.Remove handspray (D) from spray hose. Remove adapter (I) using key (K), see fig. [7].
- 2. Assemble coupling piece (L) to the handshower using key (K), see fig. [7].
- 3. Hand tighten map coupling to the spray hose.

Please note that the mixer must be turned off when changing the accessories!

Ensure positive engagement of the spray or kitchen accessories in the snap coupling

M


N

Q

Maintenance see fig. [9], [10] and fold-out page II

- I. Cartridge, see fig. [9]
 - 1. Shut off hot and cold water supply
 - 2. Pull off cover cap (M)
 - 3. Remove screw (N) and pull off lever (O)
- 4. Unscrew cap (P)
- 5. Remove screws (Q) and detach cartridge (R).

Assemble in reverse order. Make sure that the cartridge seals engage in the seatings on the housing. Insert screws (Q) and tighten alternately.

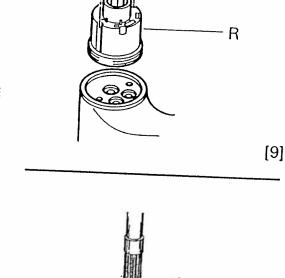

II. Flow regulator

Unscrew and clean flow regulator (4.1), see fig. [10] and fold out page II.

Only original **Grohe** replacement parts may be used.

Care

Instructions for care of this one-hand mixer will be found in the Limited Warranty supplement.

[10]

Description	Cat. No.	Pack- aging unit	No.	Description	Cat. No.	Pack- aging unit
Lever set	46 129	1		Optional accessory		
Cover cap	46 130	1	9	Head and pump assembly	45 260	1
Cartridge	46 048	1	10	Mounting set and bottle		1
Sealing set	46 209	1	-11	Temperature limiter	46 153	1
Сар	01 734	1	12	Click coupling		1
Hand held spray	46 359	1	-	Kitchen accessory set		1
Flow regulator set	45 002	1	-			1
Mounting set	46 078	1				'
Spray hose assembly	46 099	- 1				
Pressure spring	07 240	1				
Connection nut set	12 902	2				
	Cartridge Sealing set Cap Hand held spray Flow regulator set Mounting set Spray hose assembly Pressure spring	Cover cap 46 130 Cartridge 46 048 Sealing set 46 209 Cap 01 734 Hand held spray 46 359 Flow regulator set 45 002 Mounting set 46 078 Spray hose assembly 46 09 Pressure spring 07 240	Cover cap	Cover cap	Cover cap 46 130 1 9 Head and pump assembly Cartridge 46 048 1 10 Mounting set and bottle Sealing set 46 209 1 11 Temperature limiter Cap 01 734 1 12 Click coupling Hand held spray 46 359 1 - Kitchen accessory set Flow regulator set 45 002 1 - Fiter spray head Mounting set 46 078 1 Pressure spring 07 240 1	Cover cap

Subject to technical modification without notice.