


REMOVAL

1. **REMOVE WIPER ARMS**
2. **REMOVE WEATHERSTRIP AND COWL LOUVERS**
3. **REMOVE WIPER MOTOR ASSEMBLY**

- (a) Disconnect the connector.
- (b) Remove the 5 bolts and wiper motor assembly.

4. **REMOVE WIPER MOTOR**

Remove the 2 bolts, then separate the motor crank arm from the wiper links at the ball and socket joint.

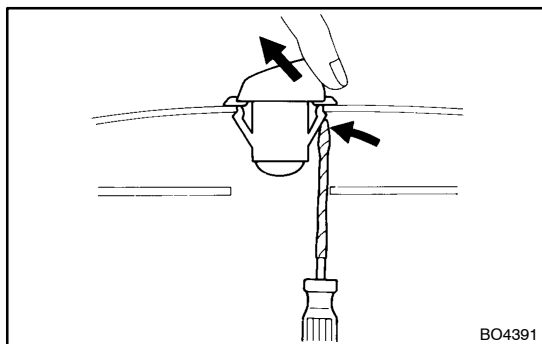

5. **REMOVE WINDOW WASHER NOZZLE**

- (a) Remove the hoses from the nozzles.
- (b) Using a screwdriver, remove the nozzle.

HINT:

Tape the screwdriver tip before use.