

H01738

DISASSEMBLY

1. w/o Power Window:

REMOVE REGULATOR HANDLE

Pull off the snap ring with a shop rag and remove the regulator handle and plate.

HINT:

At the time of reassembly, please refer to the following item. With the door window fully closed, install the plate and the regulator handle with the snap ring.


2. w/ Power Window:

REMOVE POWER WINDOW SWITCH

Using a screwdriver, pry out the switch, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

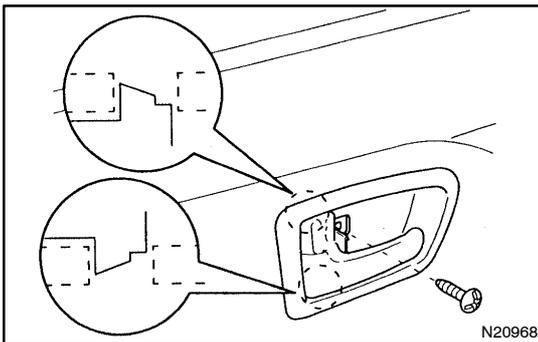

N20968

3. REMOVE INSIDE HANDLE BEZEL

(a) Using a screwdriver, pry open the screw cover and remove the screw.


HINT:

Tape the screwdriver tip before use.

(b) Using a screwdriver, pry out the bezel.

HINT:

Tape the screwdriver tip before using. Use the screwdriver to release the bezel from the top and bottom protrusions on the handle assembly as shown.

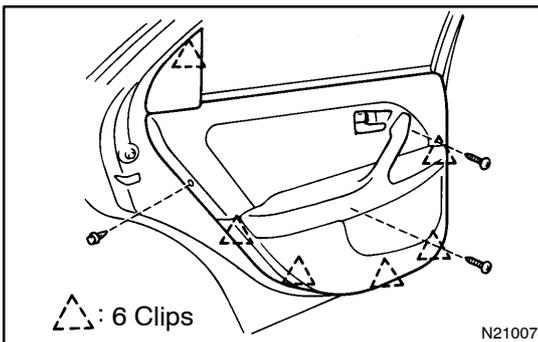

N21007

4. REMOVE DOOR TRIM

HINT:

Tape a screwdriver tip before use.


(a) Using the screwdriver, remove the 2 screw caps.

(b) Remove the inside cover.

(c) Remove the 2 screws and clip.

(d) Insert the screwdriver between the door and door trim to pry out.

(e) Pull the trim upward to remove it, then disconnect the connector.

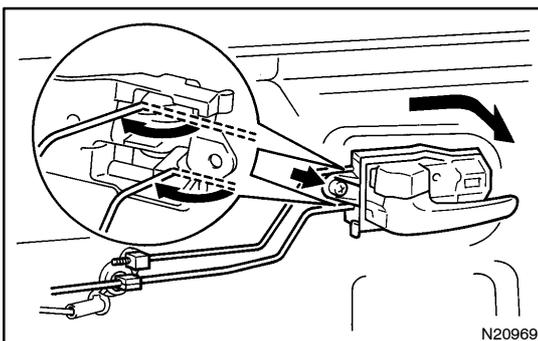

N20969

5. REMOVE DOOR INSIDE HANDLE

(a) Remove the screw and pull the handle forward.


Torque: 3.5 N·m (35 kgf·cm, 31 in·lbf)

(b) Remove the link from the clamp.

(c) Remove the inside handle from the ends of the 2 links.

6. REMOVE SERVICE HOLE COVER

Remove the grommet, then remove the service hole cover.

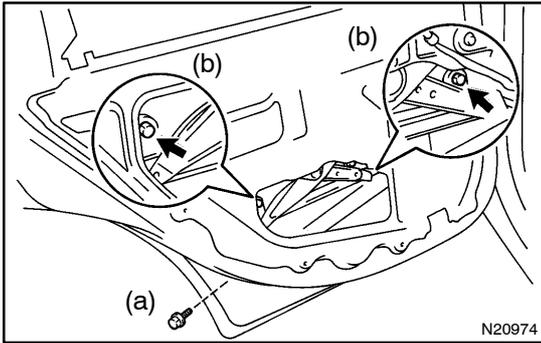

7. REMOVE DOOR GLASS AND RUN

- (a) Remove the bolt and nut holding the rear side frame to the door.
- (b) Remove the 2 bolts holding the door glass to the window regulator.

Torque: 8.0 N·m (80 kgf·cm, 71 in·lbf)

- (c) Remove the rear side frame and the rear section of the door glass run.

Torque: 5.5 N·m (55 kgf·cm, 49 in·lbf)

HINT:


Pull the door glass run upward.

- (d) Remove the door glass.

- (e) Remove the entire door glass run.


HINT:

Pull the door glass run upward.

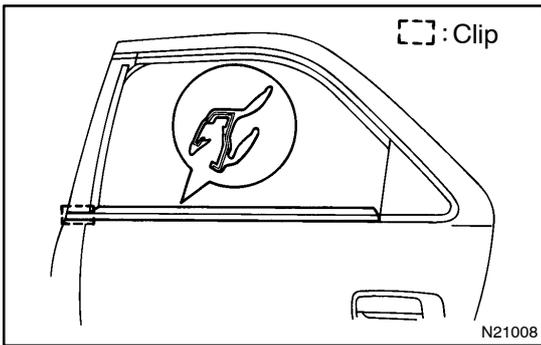

8. REMOVE REAR DOOR BELT MOULDING

Pry the rearward end of the rear door belt moulding from the door and remove the moulding.

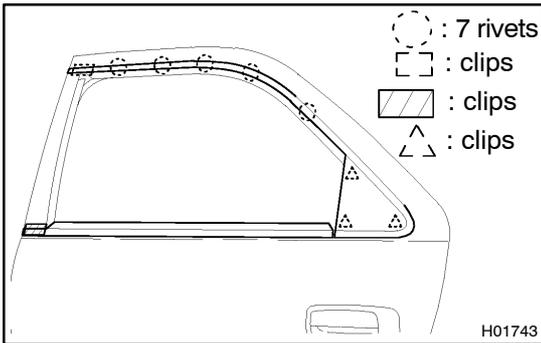


9. REMOVE REAR DOOR UPPER MOULDING

- (a) Using a drill, cut the flange portion of the 5 rivets.

HINT:

Use 5 new rivets.

- (b) Insert a screwdriver between the door and the rear door upper moulding and pry it off.

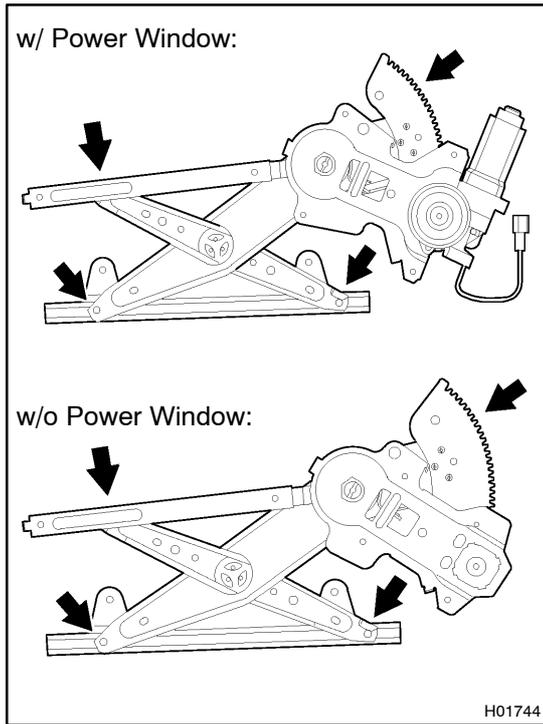

10. REMOVE WINDOW REGULATOR ASSEMBLY

Remove the bolts and window regulator assembly.

Torque: 5.5 N·m (55 kgf·cm, 49 in·lbf)

HINT:

At the time of reassembly, please refer to the following item.
Apply MP grease to the window regulator rollers.

11. w/ Power Window:

REMOVE MOTOR FROM WINDOW REGULATOR


Remove the 3 screws and motor.

12. REMOVE REAR DOOR LOCK CHILD PROTECTION COVER

Using a screwdriver, pry out the cover.

HINT:

Tape the screwdriver tip before use.

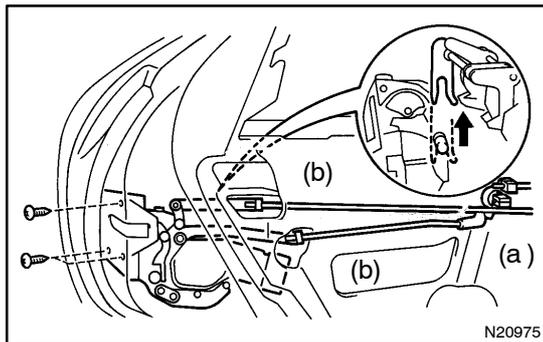

13. REMOVE DOOR LOCK


- (a) Remove the clip.
- (b) Disconnect the 2 links from the door lock and remove the 2 links.
- (c) Disconnect the link from the outside handle.
- (d) Remove the 3 screws.

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

HINT:

At the time of reassembly, please refer to the following item.
Apply adhesive to the 3 screws.

Part No. 08833-00070, THREE BOND 1324 or equivalent

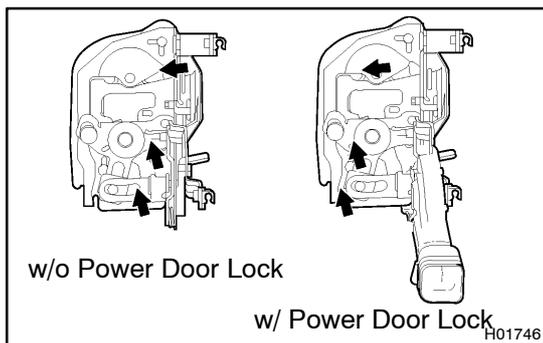

(e) w/ Power Door Lock:

Disconnect the connector.

(f) Remove the door lock through the service hole.

HINT:

At the time of reassembly, please refer to the following item.
Apply MP grease to the sliding surface of the door lock.

14. REMOVE OUTSIDE HANDLE

Torque: 7.0 N·m (70 kgf·cm, 61 in·lbf)