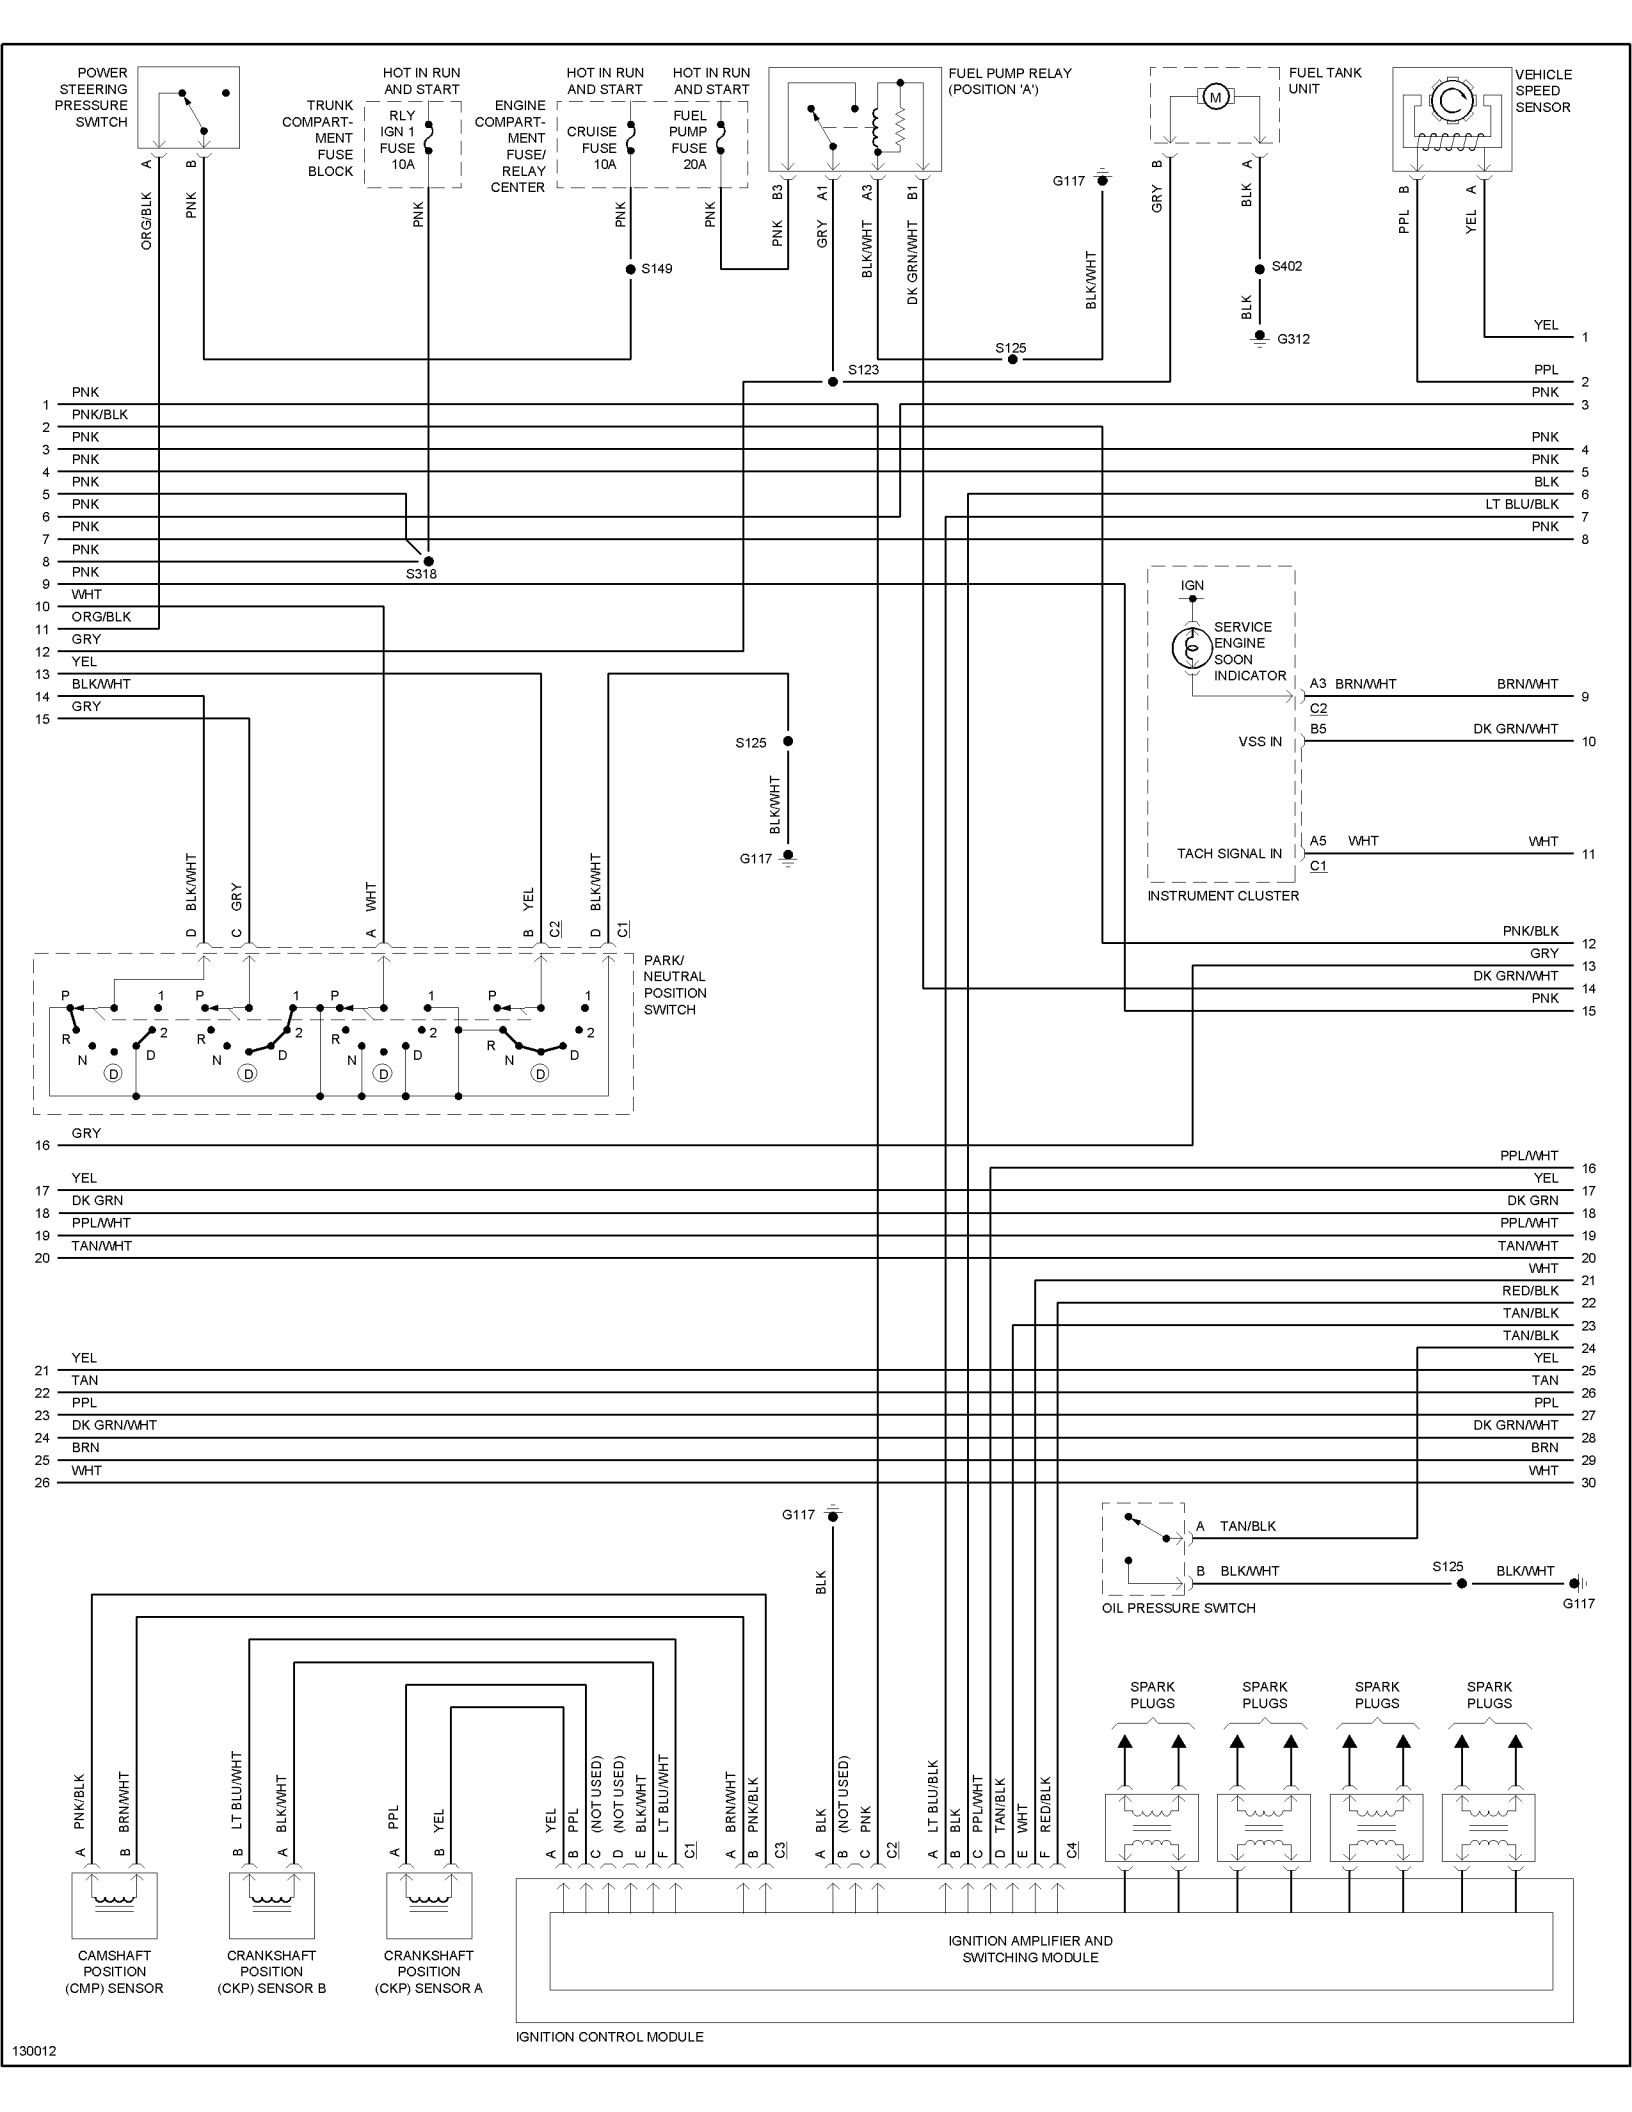
POWER STEERING PRESSURE SWITCH
HOT IN RUN AND START
TRUNK COMPARTMENT FUSE BLOCK
RLY IGN 1 FUSE 10A
ENGINE COMPARTMENT FUSE/ RELAY CENTER
CRUISE FUSE 10A
FUEL PUMP FUSE 20A
FUEL PUMP RELAY (POSITION 'A')
FUEL TANK UNIT
VEHICLE SPEED SENSOR
S149
S123
S125
S402
G312
G117
S318
IGN
SERVICE ENGINE SOON INDICATOR
VSS IN
TACH SIGNAL IN
INSTRUMENT CLUSTER
PARK/ NEUTRAL POSITION SWITCH
OIL PRESSURE SWITCH
SPARK PLUGS
CAMSHAFT POSITION (CMP) SENSOR
CRANKSHAFT POSITION (CKP) SENSOR B
CRANKSHAFT POSITION (CKP) SENSOR A
IGNITION AMPLIFIER AND SWITCHING MODULE
IGNITION CONTROL MODULE
130012