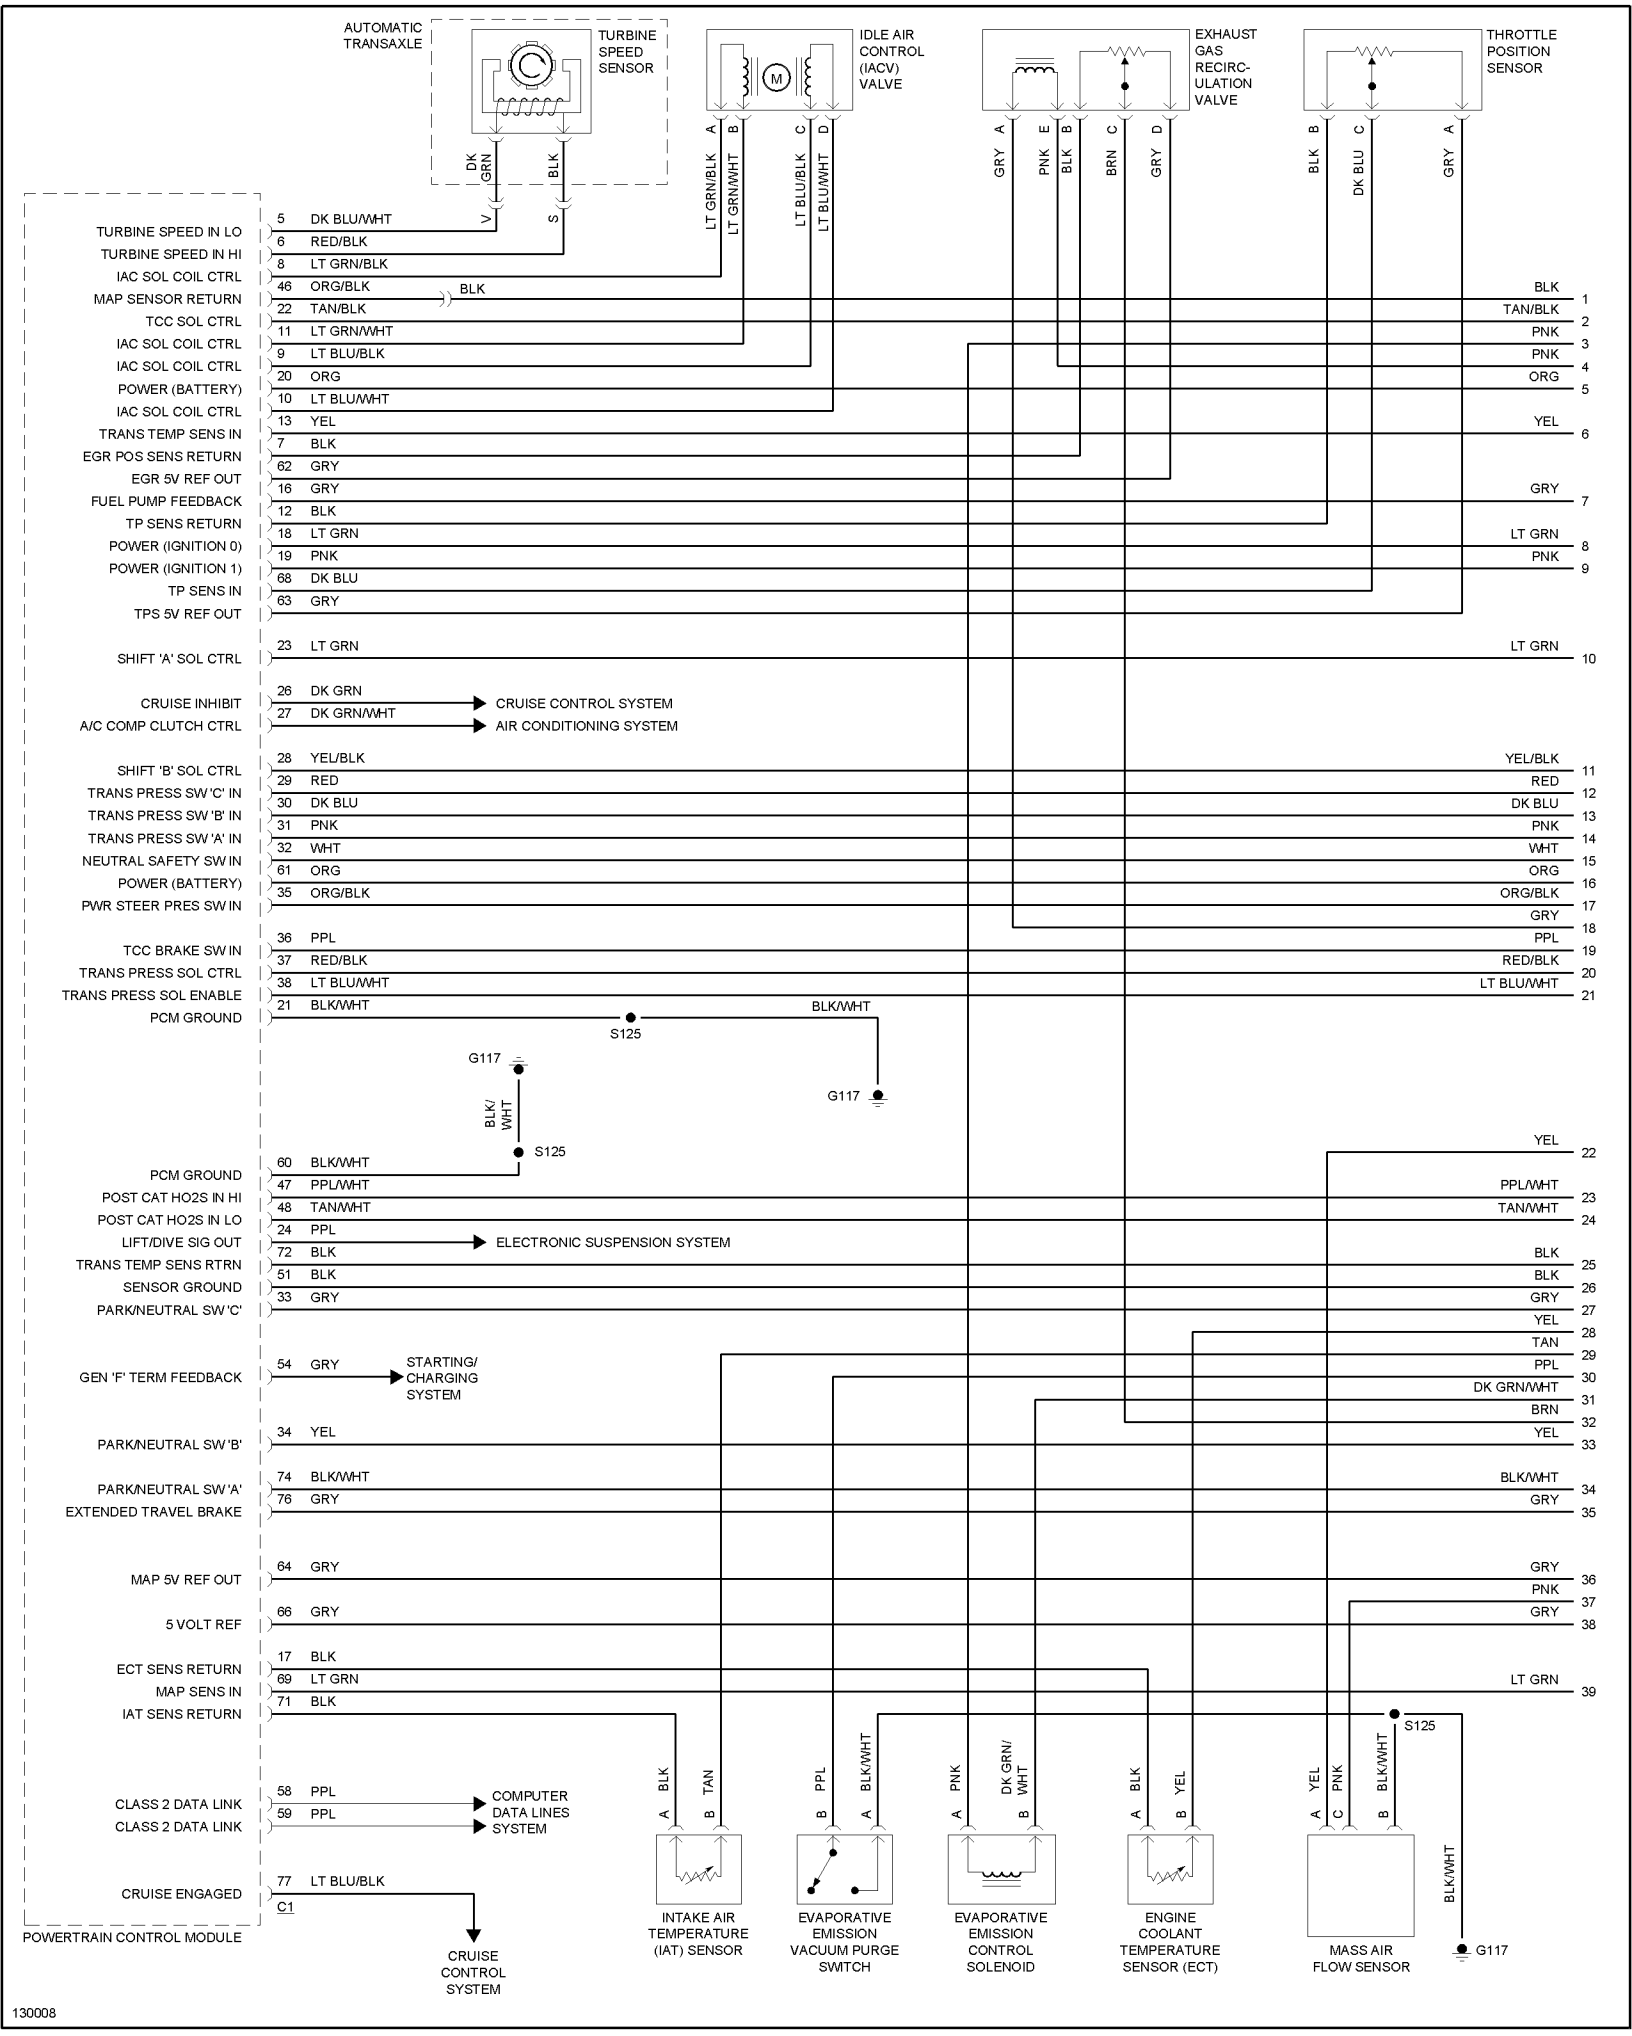
AUTOMATIC TRANSAXLE
TURBINE SPEED SENSOR
IDLE AIR CONTROL (IACV) VALVE
EXHAUST GAS RECIRC-ULATION VALVE
THROTTLE POSITION SENSOR
DK GRN
BLK
V
S
LT GRN/BLK
LT GRN/WHT
LT BLU/BLK
LT BLU/WHT
GRY
PNK
BLK
BRN
GRY
BLK
DK BLU
GRY
TURBINE SPEED IN LO
TURBINE SPEED IN HI
IAC SOL COIL CTRL
MAP SENSOR RETURN
TCC SOL CTRL
IAC SOL COIL CTRL
IAC SOL COIL CTRL
POWER (BATTERY)
IAC SOL COIL CTRL
TRANS TEMP SENS IN
EGR POS SENS RETURN
EGR 5V REF OUT
FUEL PUMP FEEDBACK
TP SENS RETURN
POWER (IGNITION 0)
POWER (IGNITION 1)
TP SENS IN
TPS 5V REF OUT
SHIFT 'A' SOL CTRL
CRUISE INHIBIT
A/C COMP CLUTCH CTRL
CRUISE CONTROL SYSTEM
AIR CONDITIONING SYSTEM
SHIFT 'B' SOL CTRL
TRANS PRESS SW 'C' IN
TRANS PRESS SW 'B' IN
TRANS PRESS SW 'A' IN
NEUTRAL SAFETY SW IN
POWER (BATTERY)
PWR STEER PRES SW IN
TCC BRAKE SW IN
TRANS PRESS SOL CTRL
TRANS PRESS SOL ENABLE
PCM GROUND
S125
BLK/WHT
G117
BLK/WHT
S125
PCM GROUND
POST CAT HO2S IN HI
POST CAT HO2S IN LO
LIFT/DIVE SIG OUT
ELECTRONIC SUSPENSION SYSTEM
TRANS TEMP SENS RTRN
SENSOR GROUND
PARK/NEUTRAL SW 'C'
GEN 'F' TERM FEEDBACK
STARTING/ CHARGING SYSTEM
PARK/NEUTRAL SW 'B'
PARK/NEUTRAL SW 'A'
EXTENDED TRAVEL BRAKE
MAP 5V REF OUT
5 VOLT REF
ECT SENS RETURN
MAP SENS IN
IAT SENS RETURN
CLASS 2 DATA LINK
CLASS 2 DATA LINK
COMPUTER DATA LINES SYSTEM
CRUISE ENGAGED
C1
CRUISE CONTROL SYSTEM
POWERTRAIN CONTROL MODULE
INTAKE AIR TEMPERATURE (IAT) SENSOR
EVAPORATIVE EMISSION VACUUM PURGE SWITCH
EVAPORATIVE EMISSION CONTROL SOLENOID
ENGINE COOLANT TEMPERATURE SENSOR (ECT)
MASS AIR FLOW SENSOR
G117
130008